

INSTRUCTION

Mounting the AUDI A3 8P handle





1. Insert the included plastic piece and pry it around air vents.





2. Grab the handle with your hand and move alternately up-down, left-right pulling the airflow towards you all the time. Do the same with the second one.

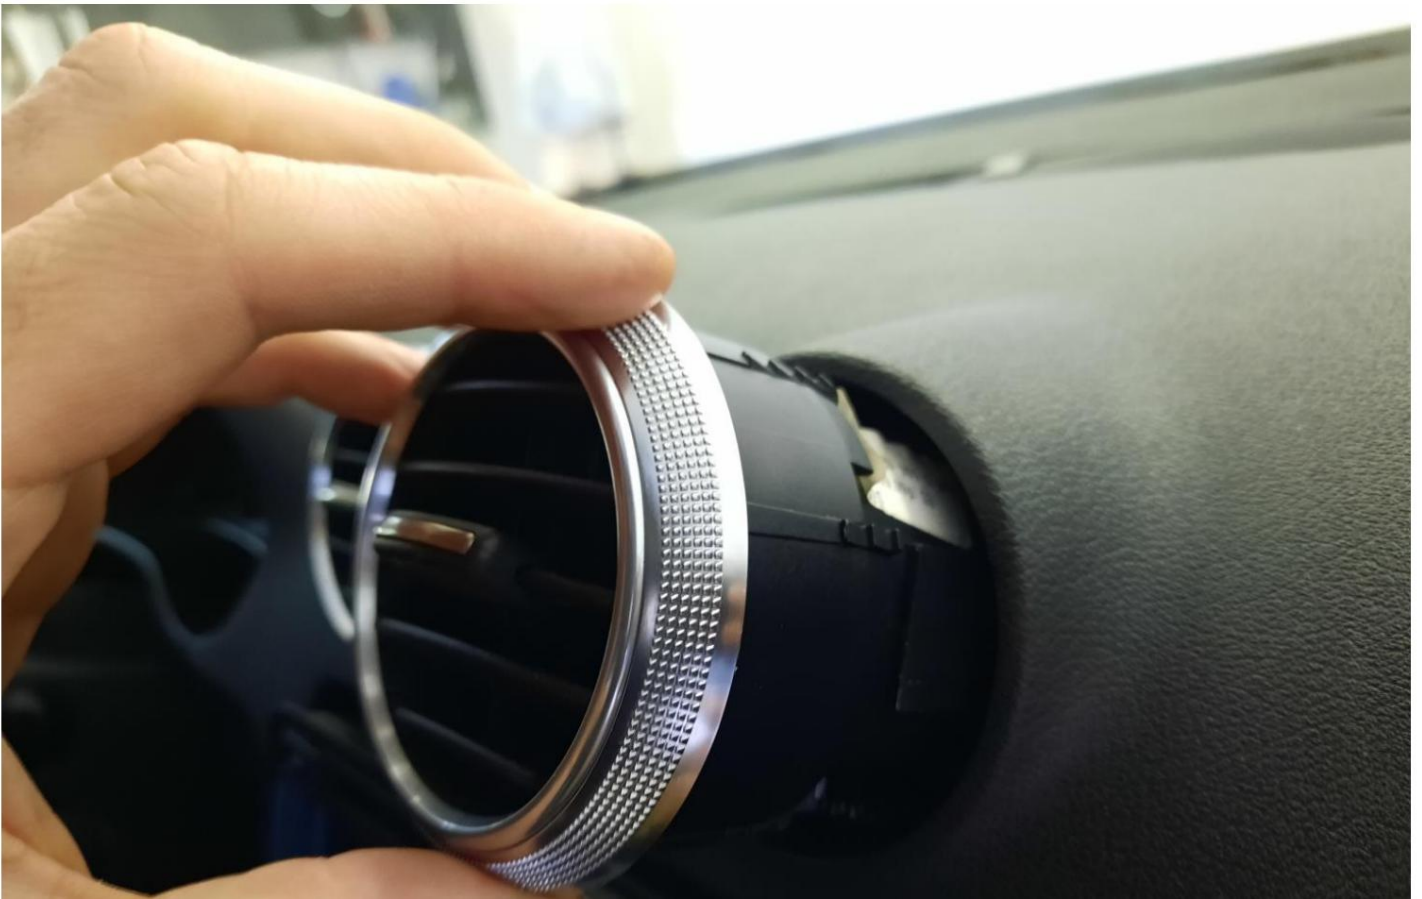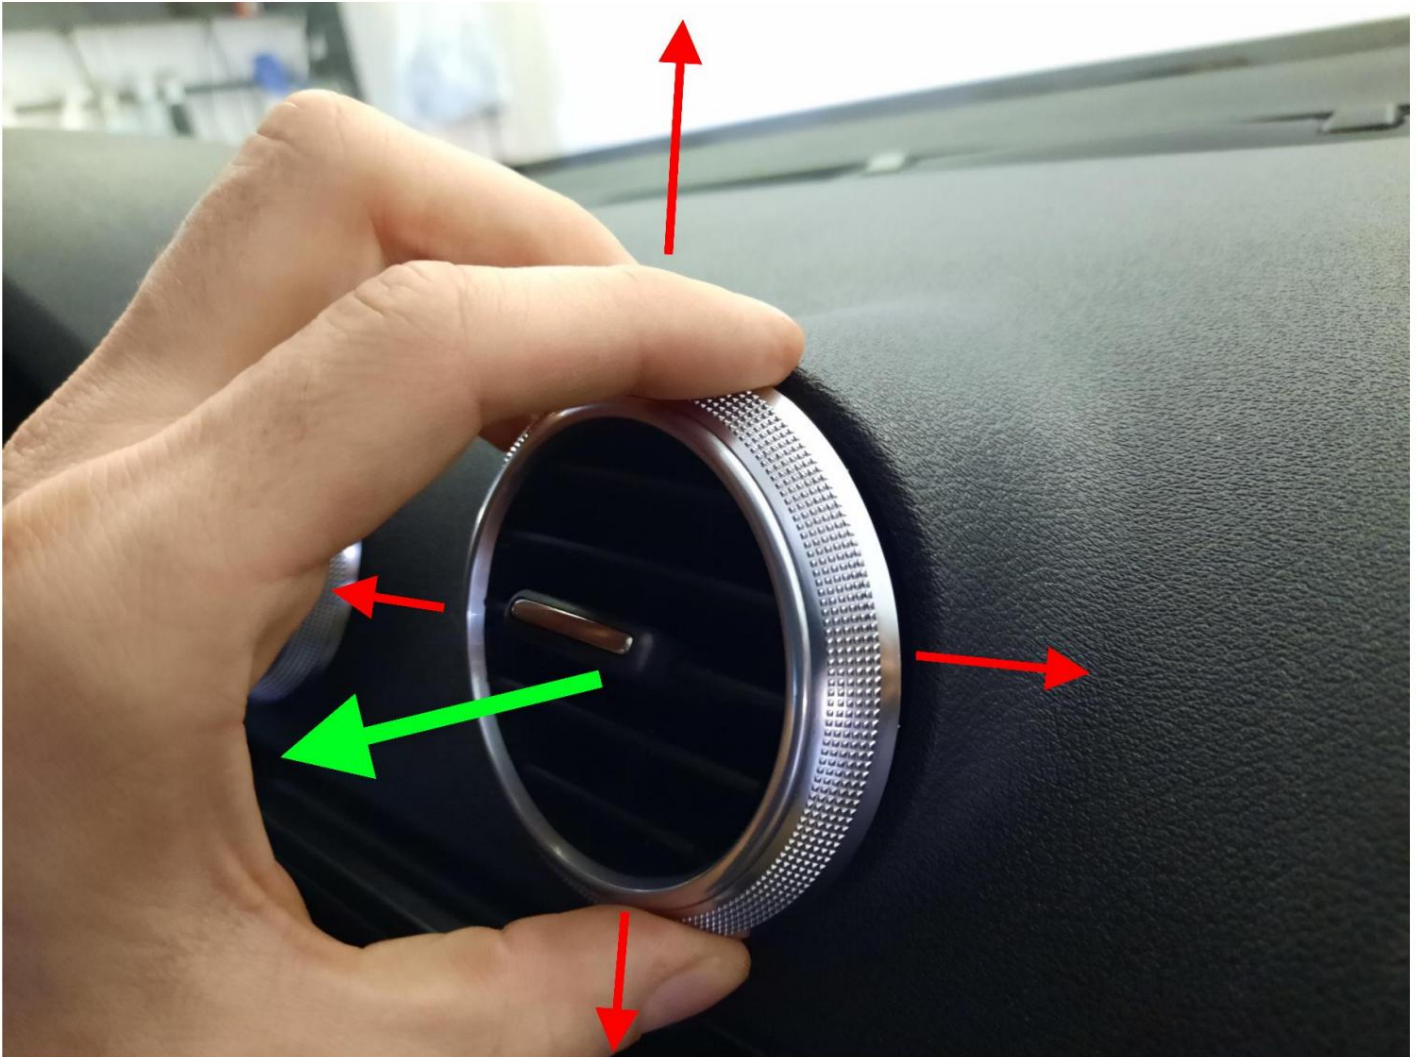

3. After removing the vents, pass them through the holder.



4. Start pushing both air vents into place at the same time.



5. Attach the handle as desired.





6. Go !!!



Telefon:

Artur: +48 600 212 527

Pon – Pią: 8:00-20:00



E-mail:

artiimotocustoms@gmail.com



Wpadnij na kawę:

Piątkowiec 4B, 39-308 Piątek

<https://artii.pl/>